



ESCO EQUIPMENT SUPPLY COMPANY

Instruction Manual

Pneu-Tek Impact Driven Bead Breaker

Model #20429





ESCO EQUIPMENT SUPPLY COMPANY

CAUTION:

READ AND FOLLOW ALL WARNINGS, CAUTIONS AND INSTRUCTIONS ASSOCIATED WITH THE PROPER USE OF THIS PRODUCT, FAILURE TO COMPLY COULD RESULT IN DEATH, BODILY INJURY AND/OR DAMAGE TO EQUIPMENT.

This product as well as all tire tools, should never be used by persons unless they have been trained properly according to the O.S.H.A. regulation #29CFR 1910.177 entitled "Servicing Single-Piece & Multipiece Rim Wheels". Copies of this regulation can be obtained by contracting this manufacturer. 800-352-9852 or sales.esco.net.

Instructions

1. Choose either an air impact or air ratchet. An air ratchet is preferred for hard to reach areas.



Air Impact vs. Air Ratchet

If using a high torque air impact, set the gun to a lower setting.






ESCO EQUIPMENT SUPPLY COMPANY

2. Insert the Impact tool counter-clockwise onto the grapple hook drive bolt and begin to Impact the tool into position, use the handle to guide the wedged feet between the rim edge and tire bead.




3. Impact the drive bolt until the tool is in an upright position and the wedge feet are secured between the bead and rim.

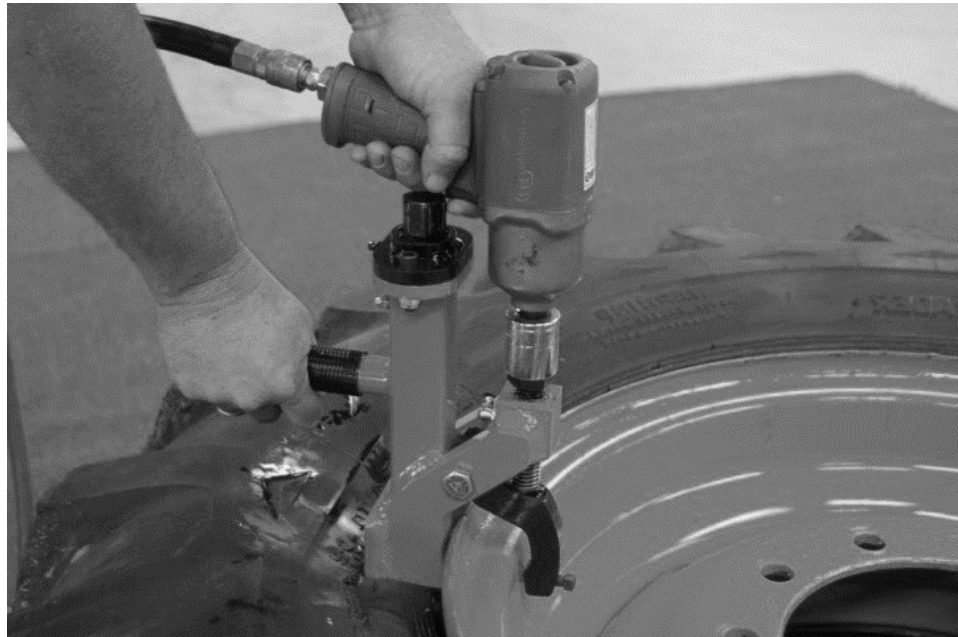



ESCO EQUIPMENT SUPPLY COMPANY


4. Impact the wedge foot drive bolt counter-clockwise until it strips the tire bead free of the rim.

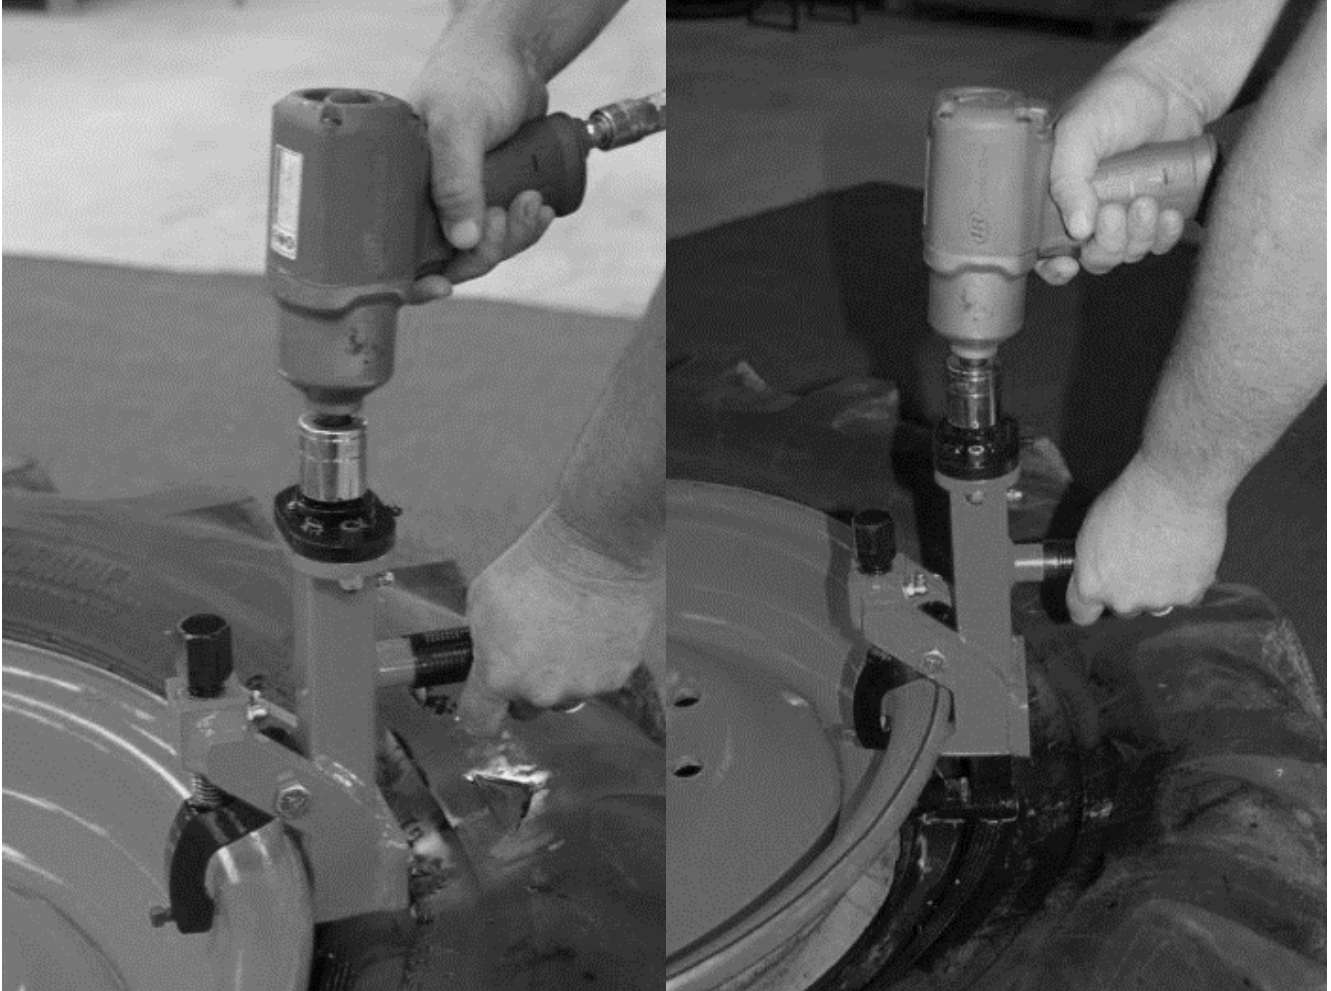



ESCO EQUIPMENT SUPPLY COMPANY

5. Retract foot by reversing impact on wedge foot, then retract grapple hook by reversing drive bolt, finally, remove tool from rim.

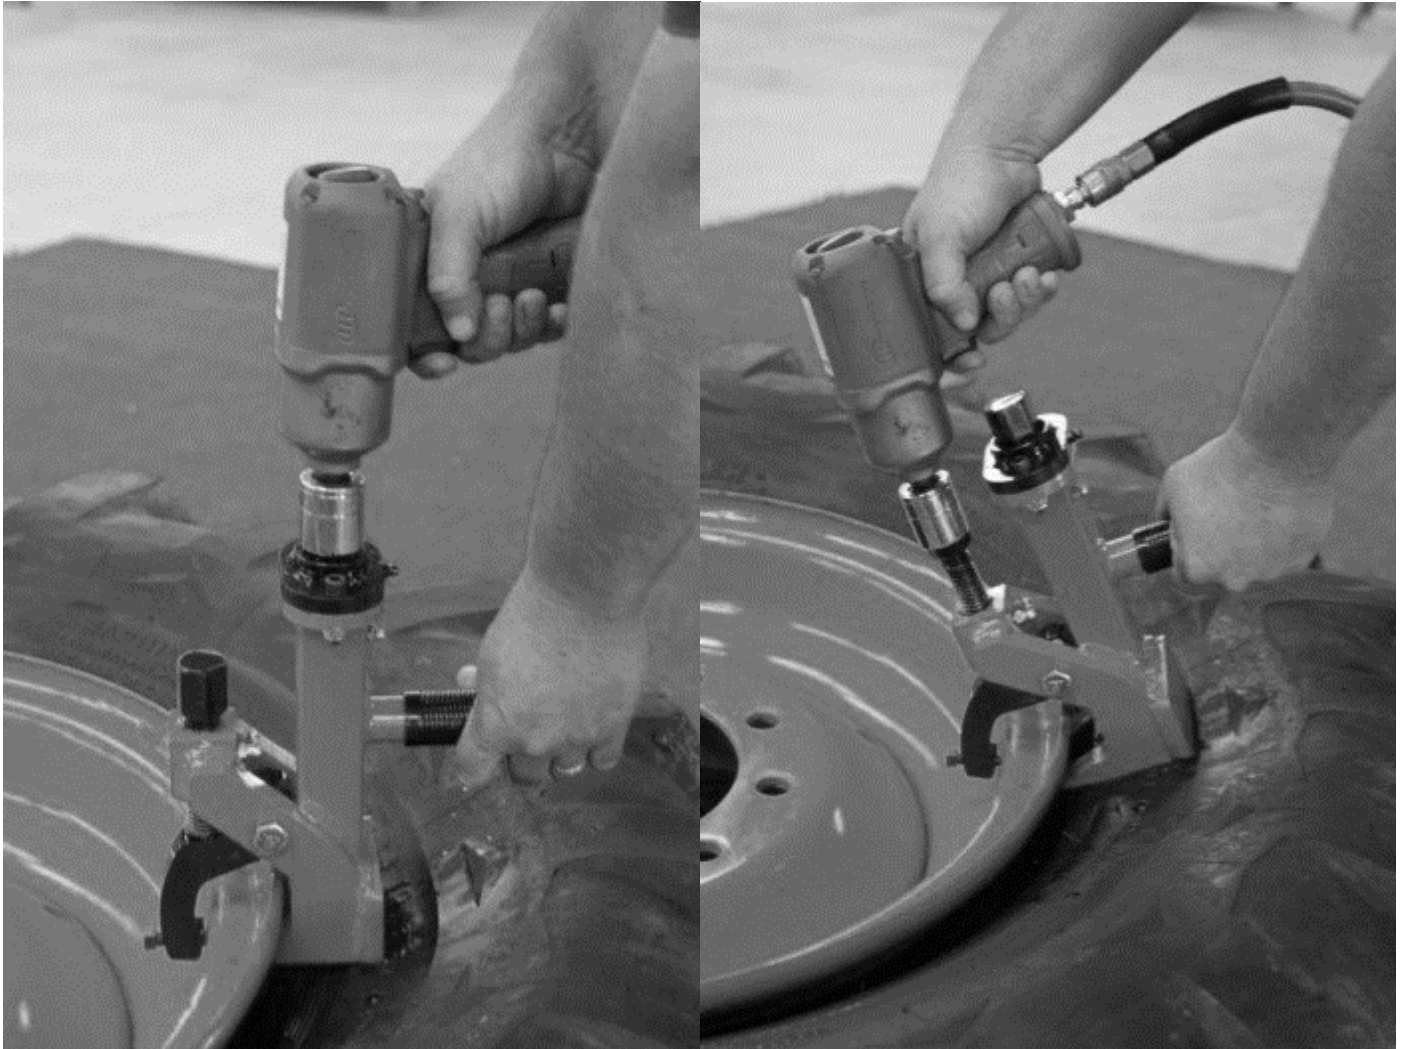



ESCO EQUIPMENT SUPPLY COMPANY

Parts Diagram

