


LIQUID TRUCK TIRE BALANCE

The ECO-Friendly Way to Balance Tires!

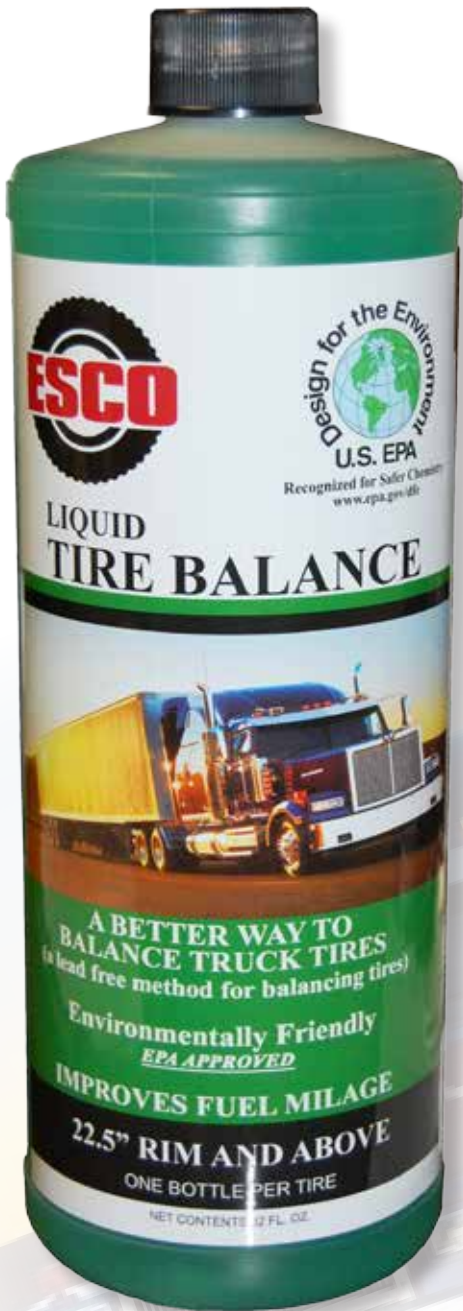

32 oz. Bottle
Services One Tire
Per Bottle
Part No. 20471

Free Flowing Liquid Tire Balancer and Lubricant!

ESCO Liquid Tire Balance is a Free Flowing Liquid Balancer for 22.5" Rims and above that is EPA Approved. With the Rapid Banning of Lead Weights on Tires, this Product serves as an easy solution.*

- Instant tire balance for the life of the tire.
- **TRUCK TIRES RUN 16% COOLER** and will extend the tread life by reducing heat build up.
- Eliminates Rust on Rims.
- Lubricates for a perfect Bead Seat.
- Tire Changer Friendly.
- Will Not block valve stem.
- Does not Freeze.
- Increases casing retread ability in new and retreaded tires.



* 22.5 and above use 32 oz
EXCEPT these tire sizes:

19.5" Tires	16 oz.
235-85R16 Tires	8 oz.
385 Floats	48 oz.
425 Floats	64 oz.
445 Floats	64 oz.



Recognized for Safer Chemistry
www.epa.gov/dfs



15270 Flight Path Drive • Brooksville, FL 34604
www.esco.net • sales@esco.net
Phone (352) 754-1117 • Toll Free (800) 352-9852 US, Canada & Caribbean ONLY
Fax (352) 754-4508

LIQUID TRUCK TIRE BALANCE INSTALLATION GUIDE:

STEP 1



Remove Valve Core to Release Air From Tire Completely.

STEP 2



Remove Weights or All Other Balancing Compounds.

STEP 3



Cut the Cap at the Line on the Cap.

STEP 4



Install the Application Hose onto Cap.

STEP 5



Connect Hose to Valve Stem and Squeeze Bottle to Fill.

DEMOUNTED APPLICATION



Liquid Tire Balance Can Also Be Installed While the Tire is Demounted.



15270 Flight Path Drive • Brooksville, FL 34604

www.esco.net • sales@esco.net

Phone (352) 754-1117 • Toll Free (800) 352-9852 US, Canada & Caribbean ONLY

Fax (352) 754-4508