

# PRO SERIES AIR HOSE REEL



# **Operating Instructions**

Model 10971



25 ft. | 8 m Hose Included



The ESCO PRO SERIES Hose Reel is suitable for most water and compressed air applications and is ideal for use around the home, automotive workshop or industrial site.

### **FEATURES**

- Click lock mechanism with self retracting hose
- · Hose layering system
- 180° swivel wall mount bracket
- · Brass fittings
- Roller hose guides for easy retraction of hose
- Flexible hard wearing, kink resistant Extreme Ultraflex Reinforced Hose.
- Adjustable hose stopper
- · Includes wall mounting bracket



## PRODUCT IDENTIFICATION

- 1. Mounting Bracket
- 2. Pivot Pin
- 3. Fully Enclosed Case
- 4. Carry Handle
- 5. 3.25 ft. | 1 m Leader Hose
- 6. Hose with Adjustable Stopper




#### INSTALLATION

The ESCO PRO SERIES Reel can be mounted in a horizontal or vertical position.


- 1. Chose a location that is near to the water source or compressed air source.
- 2. For large areas, place the hose reel at the centre of the work area.
- When mounting the hose reel vertically, ensure there is adequate clearance under the reel to prevent injury or damage.
- Mounting bracket must be installed on a flat surface.

Note: It is recommended to install the mounting bracket 2.6 ft. | 0.8 m (minimum) above the floor level.

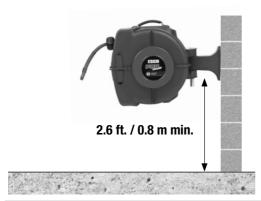

- Drill 4 x M8 holes to match the holes located in the Mounting Bracket. (Fig. 1)
- Connect the hose reel to the Mounting Bracket with the Pivot Pin. (Fig. 2)

Note: For fixed in-line position, fit the locking plate onto the Mounting Bracket prior to inserting the pivot pin. (Fig. 3)

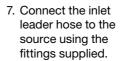

Note: Apply thread sealing tape to all air line and air hose fittings.



Fig. 1 Mounting Bracket



Fig. 2 Pivot Pin



Fig. 3 Locking Plate

# **OPERATION**

- Slowly pull out the hose to the required length. A 'clicking' noise will be heard every revolution of the inner drum. To lock the reel, allow the hose to retract slowly after hearing the second or third 'click'.
- To release the hose, pull out the hose until the 'clicking' noise stops, and then allow the hose to slowly retract while guiding the hose back into the hose reel. The self layering mechanism will coil the hose back onto the inner drum.

3. To avoid injury and damage, always hold the hose while it is retracting.

#### **IMPORTANT:**

If the hose becomes tangled and will not retract - slowly pull out the hose past the tangled section and then allow the hose to slowly retract while guiding it back into the hose reel.


Always ensure the hose is clean and not twisted.



#### ADJUSTING THE STOP-BALL


The location of the hose stopper can be adjusted to allow more hose or less hose to be exposed when fully rewound.

- 1. Pull out the desired length of hose, ensuring the hose reel is in the lock position.
- Open the latch on the hose stopper and move it to the desired position on the hose.
- 3. Re-latch the hose stopper at desired position

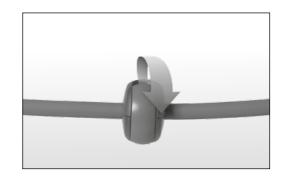

#### **CAUTION:**

Always make sure the hose reel is in the locked position before removing the hose stopper and make sure the hose stopper is securely fastened before unlocking the reel.

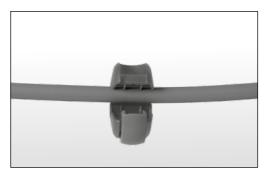

# **SPECIFICATIONS**

Model	Hose	Hose	Working	Hose	Hose	Leader	Inlet
No.	Length	Material	Pressure	I.D.	O.D.	Hose	Size
10971	25 ft. 8 m	Extreme Ultraflex Reinforced	Max. 300 p.s.i. (2068 kPa)	3/8 in. 9.2 mm	1/2 in. 15.2 mm	3.25 ft. 1 m	1/4" BSP Male

# **MAINTENANCE**

- Always keep the hose clean.
- If the hose becomes dirty, clean it with a damp cloth while retracting.
- DO NOT twist the hose while in use.
- Mount the hose reel in a sheltered area to assist and protect the performance of the hose and hose reel.
- DO NOT allow the hose to contact any corrosive chemicals or fluids.
- Always retract the hose when not in use.
- The ESCO PRO SERIES Hose Reel contains a pre-tensioned spring inside the inner drum assembly.

Do not attempt to open the inner drum assembly.



# WARRANTY & CLAIM PROCEDURE

The ESCO PRO SERIES Hose Reel is covered against defects in material and workmanship. In the instance of a warranty claim, the owner will be entitled to a replacement unit or a sufficient repair of the defective part/s and or component/s to ensure normal operating condition of the hose reel.

#### **WARRANTY EXCLUSIONS**

The hose, rubber o-rings and hose stopper are deemed normal wear items and are not covered under warranty.

The warranty does not extend to parts or components affected or damaged by accident, normal wear, misuse, neglect or faulty installation.

To register a warranty claim contact:

ESCO - Equipment Supply Co.

Phone: 1-800-352-9852 Fax: 352-754-4508 E-mail: info@esco.net



NOTES	



NOTES	





Distributed by **ESCO - Equipment Supply Co.** 15270 Flight Path Drive, Brooksville FL, 34604 info@esco.net

